


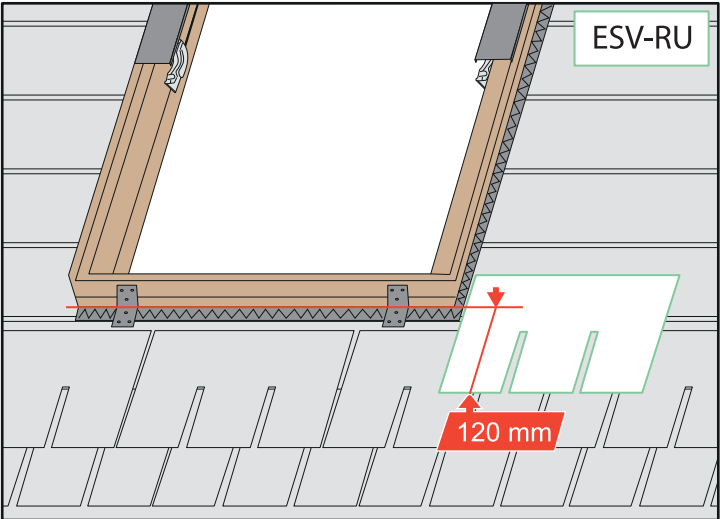
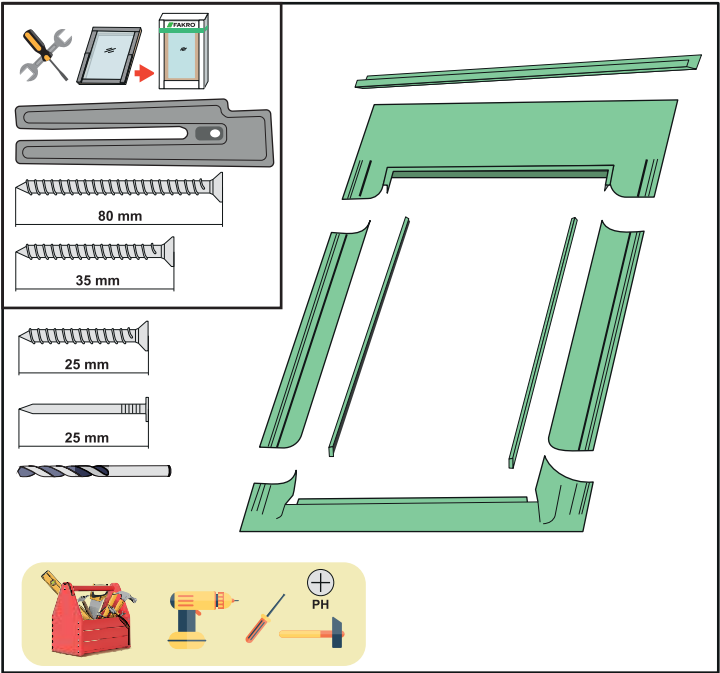
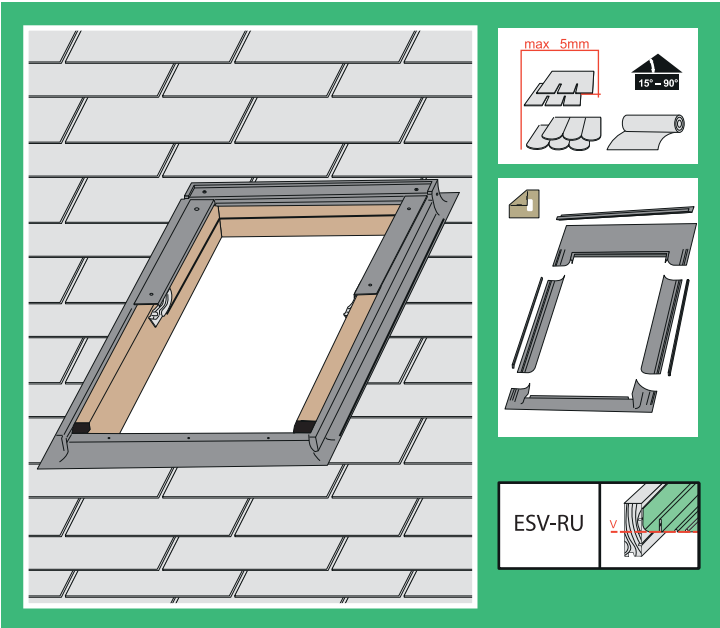
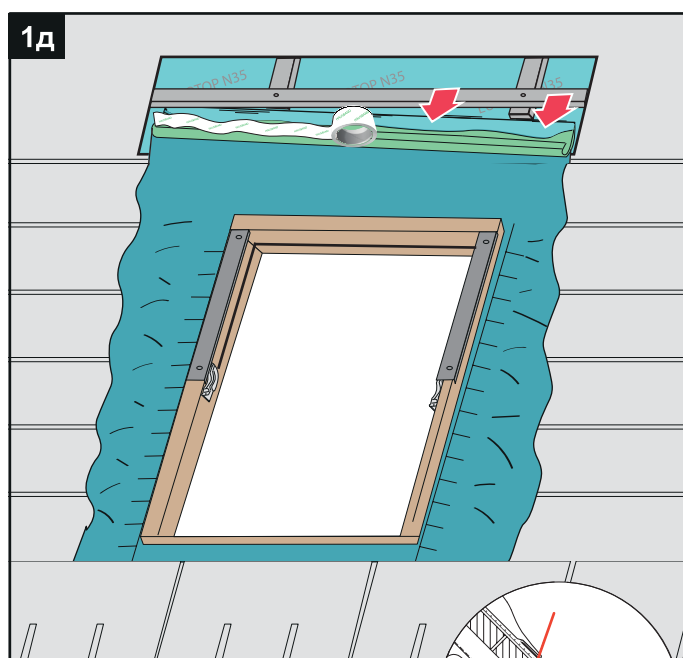
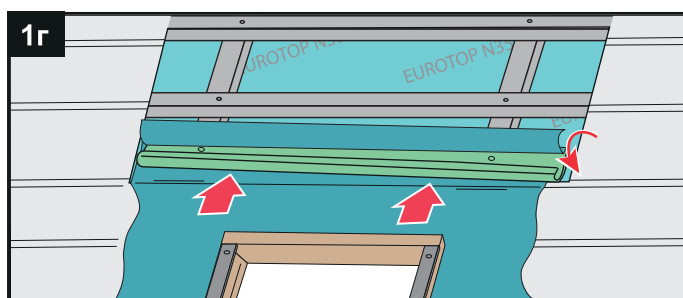
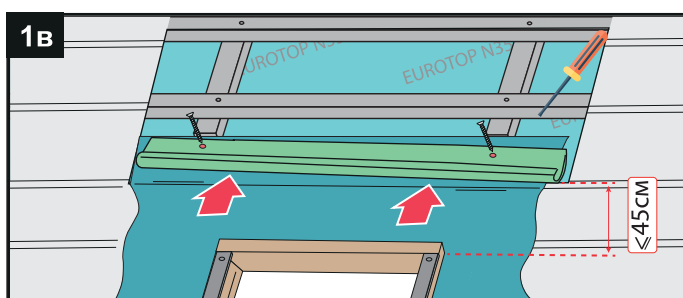
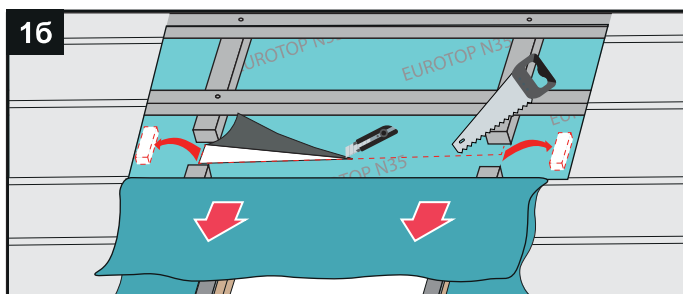
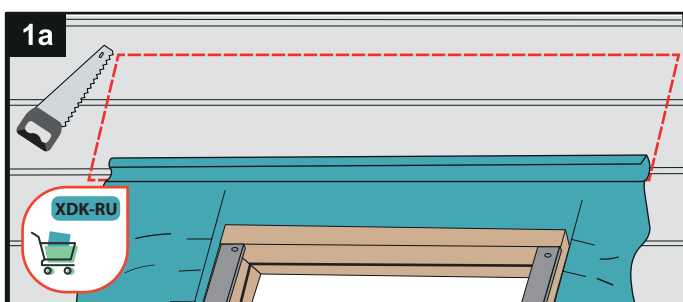
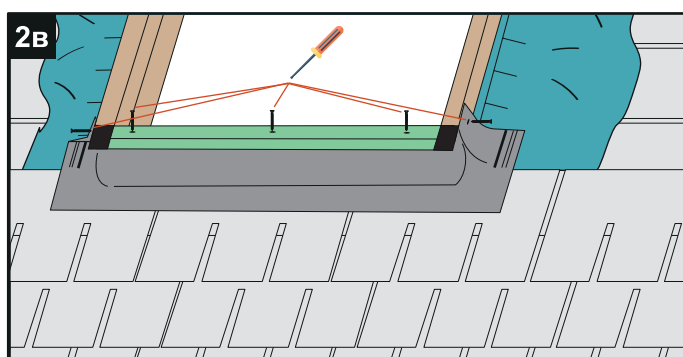




УНИВЕРСАЛЬНЫЙ ПЛАСТИКОВЫЙ ОКЛАД
ESV-RU
для плоских кровельных покрытий


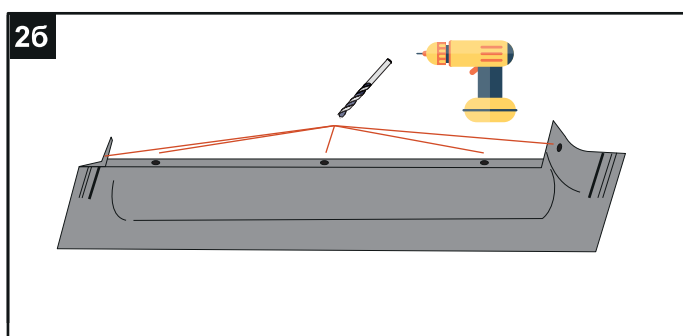


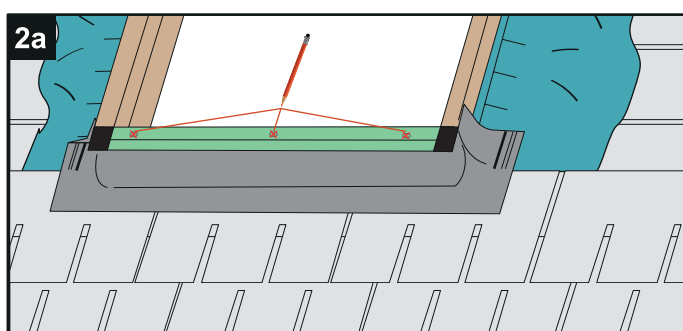

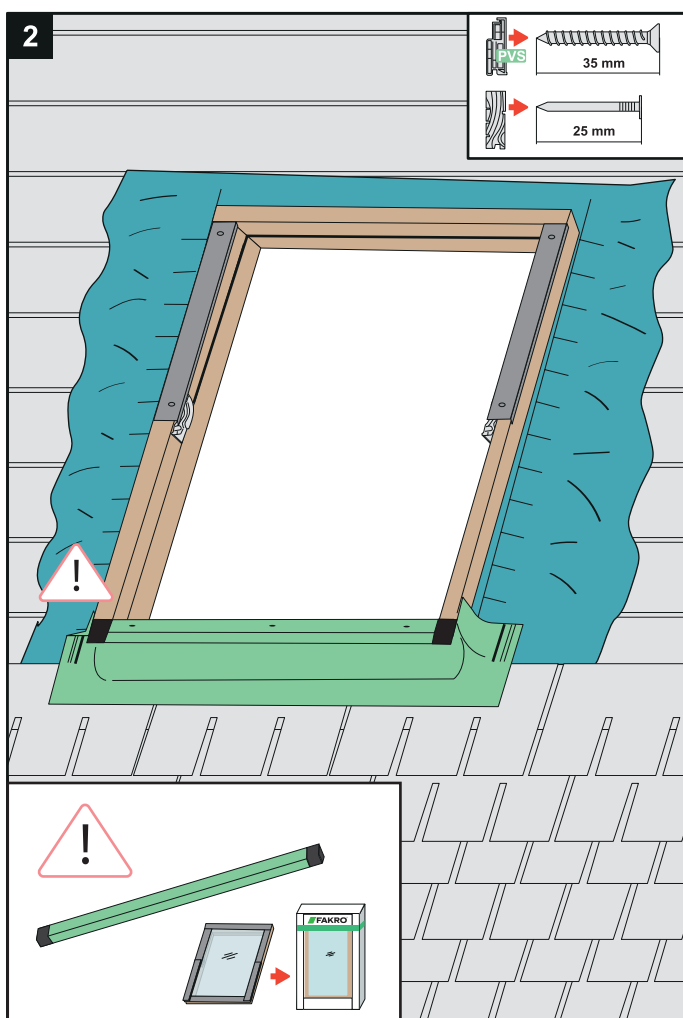

The diagram illustrates the required fasteners for two different materials. On the left, there are two vertical sections: the top one is labeled 'PVS' (polyurethane foam) and the bottom one is labeled 'Holz' (wood). To the right of each section, a red arrow points to a specific screw. The top arrow points to a 35 mm screw, and the bottom arrow points to a 25 mm screw. The screws are shown in cross-section, with their lengths clearly marked as 35 mm and 25 mm respectively.

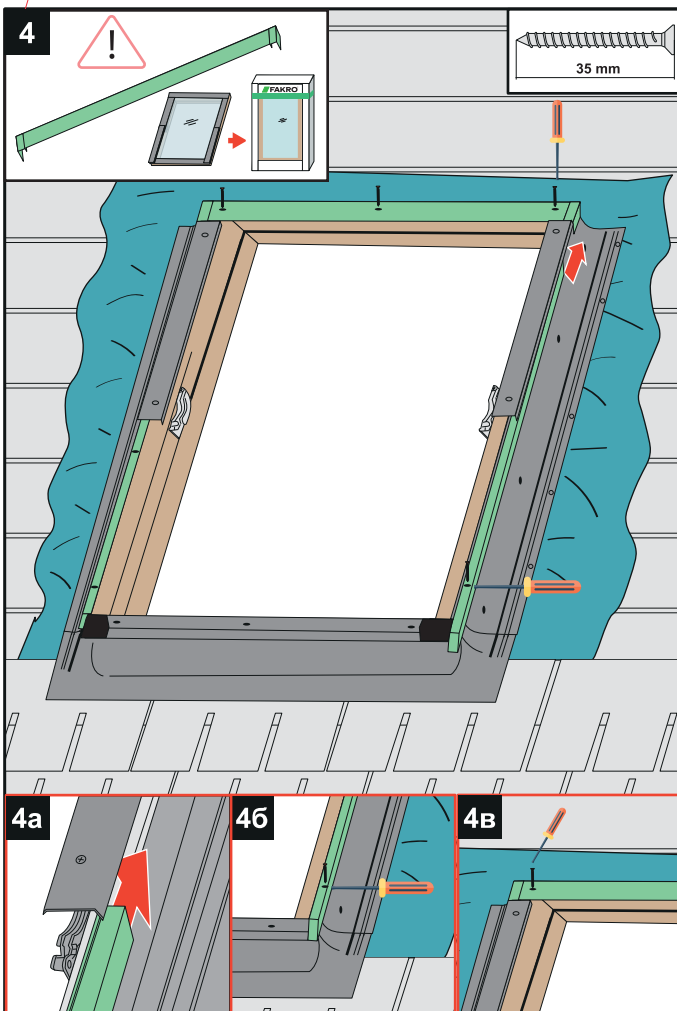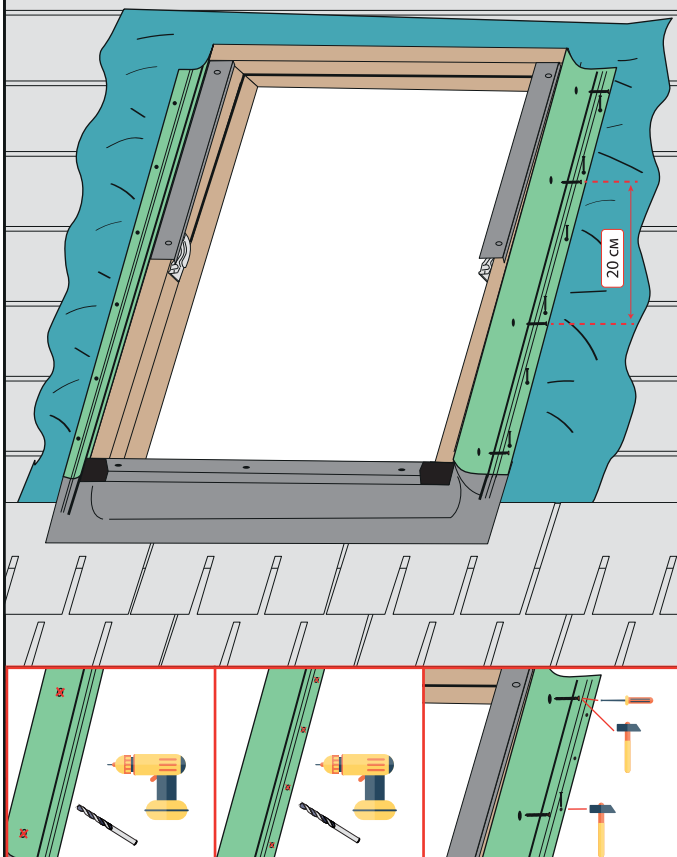

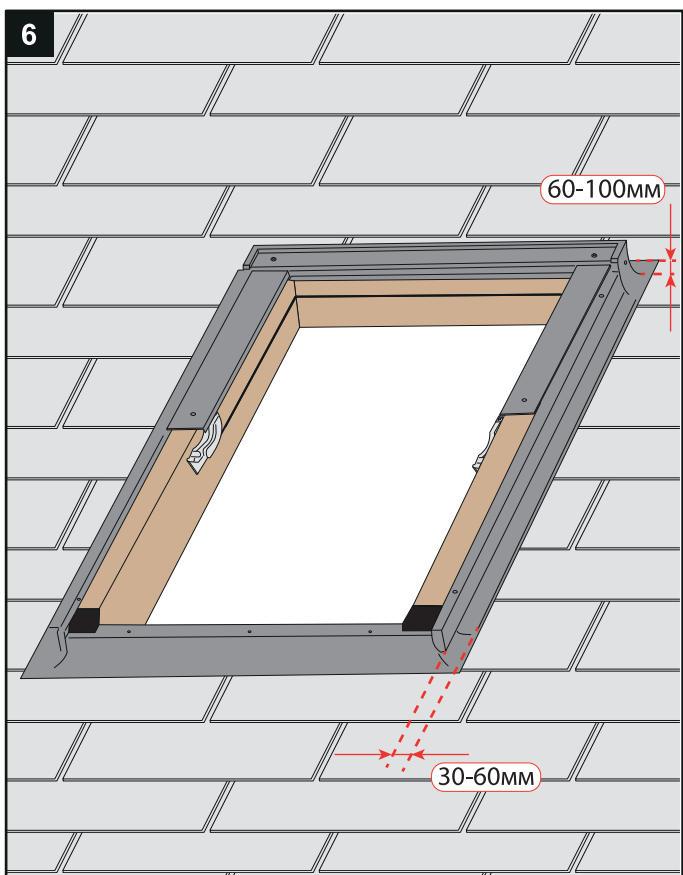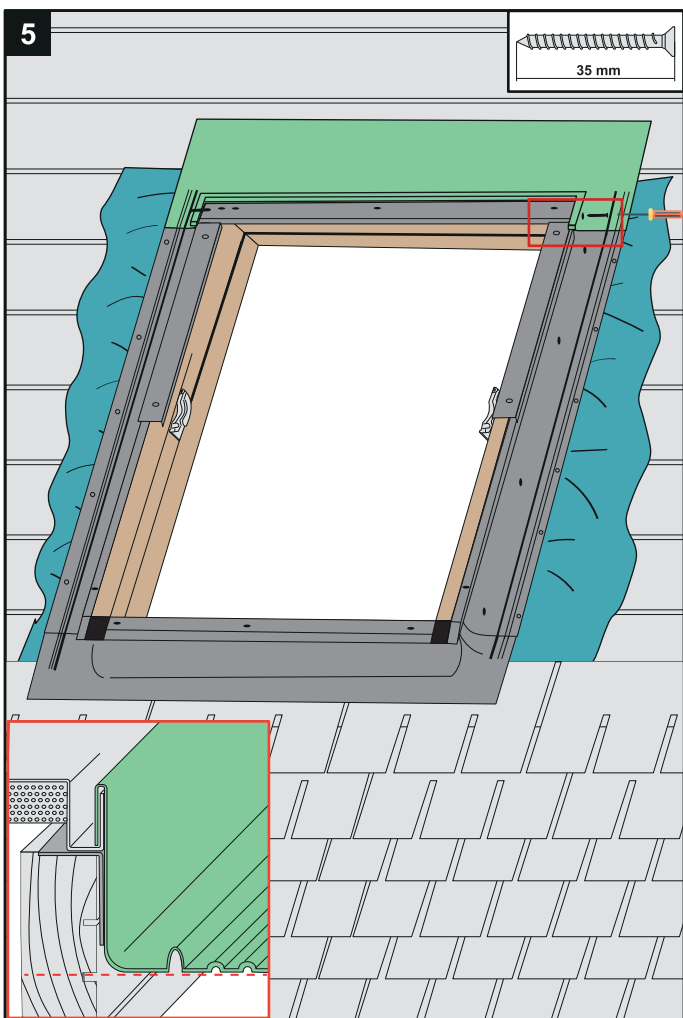

[illegible]